



Samsung Epic 4G Power Button Replacement

Installing a new power button into your Samsung Epic 4G requires little experience and minimal phone disassembly.

Written By: Andrew Cunningham



INTRODUCTION

This guide details how to install a new power button into your Samsung Epic 4G. Directions are provided for both disassembly and reassembly.



TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Phone Case



- Power off the phone using the "Power Button" located on the left side of the phone.
- Remove back panel of phone by sliding your fingernail along the edge of the device. The rear plastic panel will snap off from the remainder of the device.

Step 2 — Battery



- Remove the battery from the device by pulling up on the battery edge.

Step 3 — Removing the Memory Card:




- Remove the memory card from the device by gently sliding it out of its holder.

Step 4 — Removing the Back Housing



- Using the Phillips screwdriver, remove the seven screws from the back of the phone.
- Using a prying tool, separate the back housing from the silver trim around the phone.
- ☑ While separating the two pieces, most of the buttons (including the power button) will fall out. Be sure to keep track of the buttons and use them for reassembly.

Step 5 — Removing the Power Button

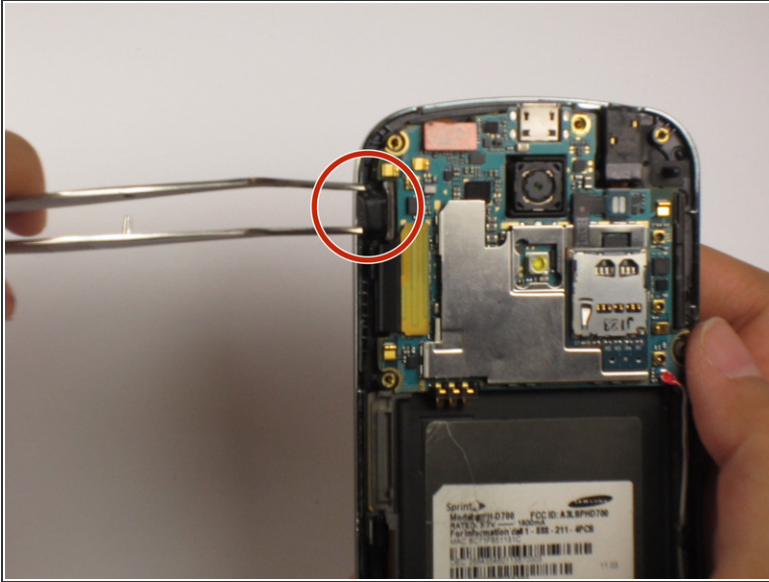

- Using the tweezers carefully remove the power button.
- ⓘ At this point, you can replace the button with a new one.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 03:56:20 PM.